


TauroPace

Step by step instructions

PREPARATION:

1

Surgical skin preparation must be carried out as close as possible to commencement of the procedure with an antiseptic solution recommended (consider fascial plane block for local anesthesia).

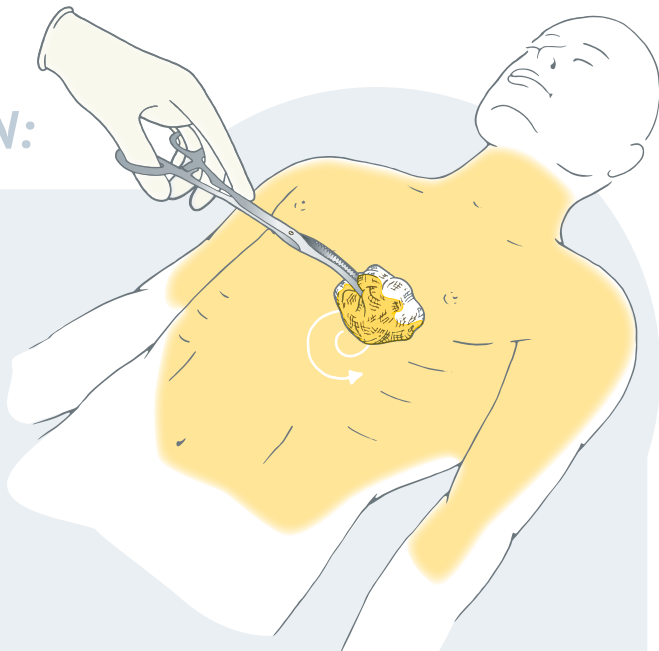


2

Drape the patient.



3

Transfer **TauroPace** to a gallipot containing surgical swabs.

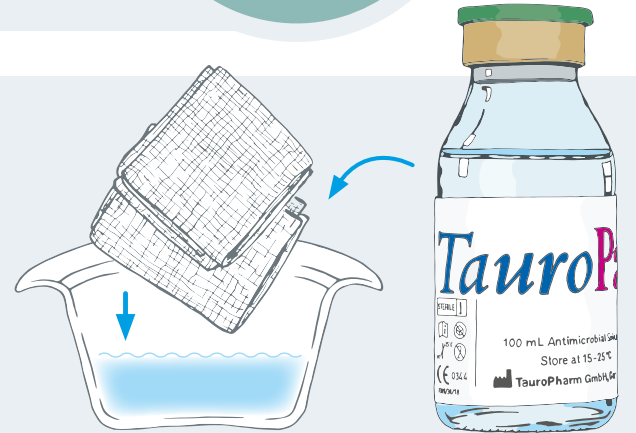

CIED-placement

1


After skin incision and gaining access to/preparation of the vein wipe down sheath/dilator with **TauroPace** before placement.

2

After placement rinse the surgical site with **TauroPace**.


3

Wipe down the lead with a **TauroPace** soaked swab prior to placement. Please ensure to mobilise the suture sleeve with a **TauroPace** soaked swab (important).

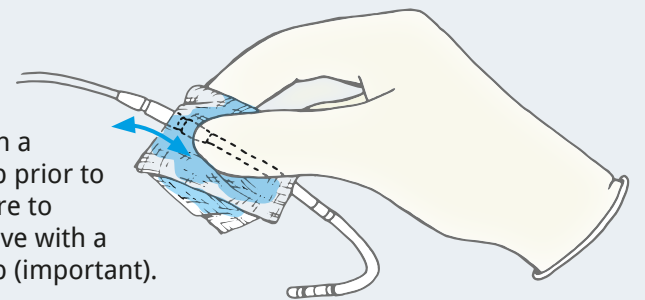


4

Move the suture sleeve in final position with a **TauroPace** soaked swab.

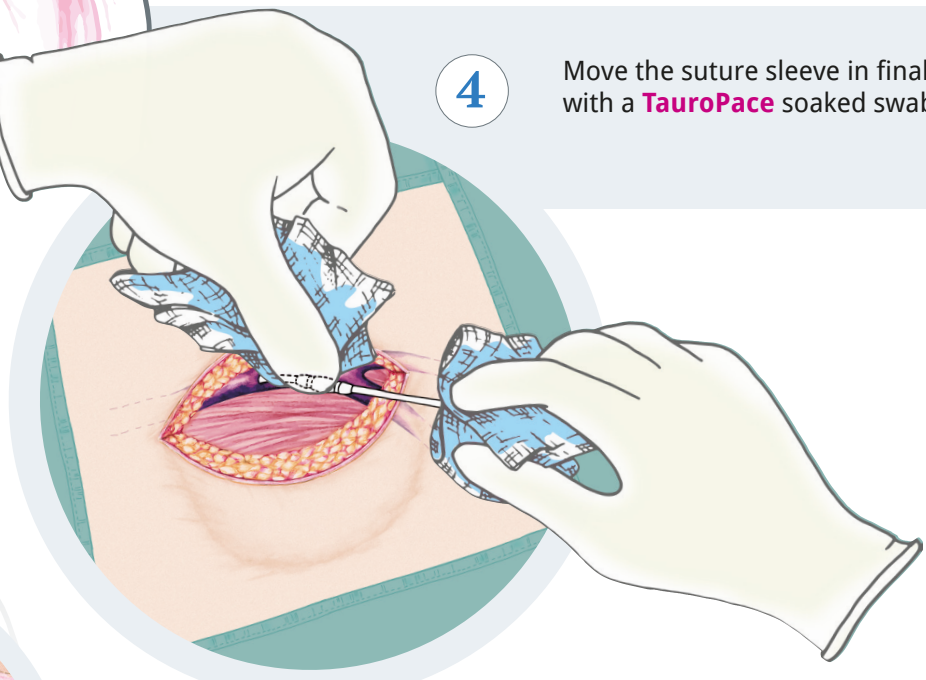

5

After placement of the lead(s), rinse the surgical site with **TauroPace**.

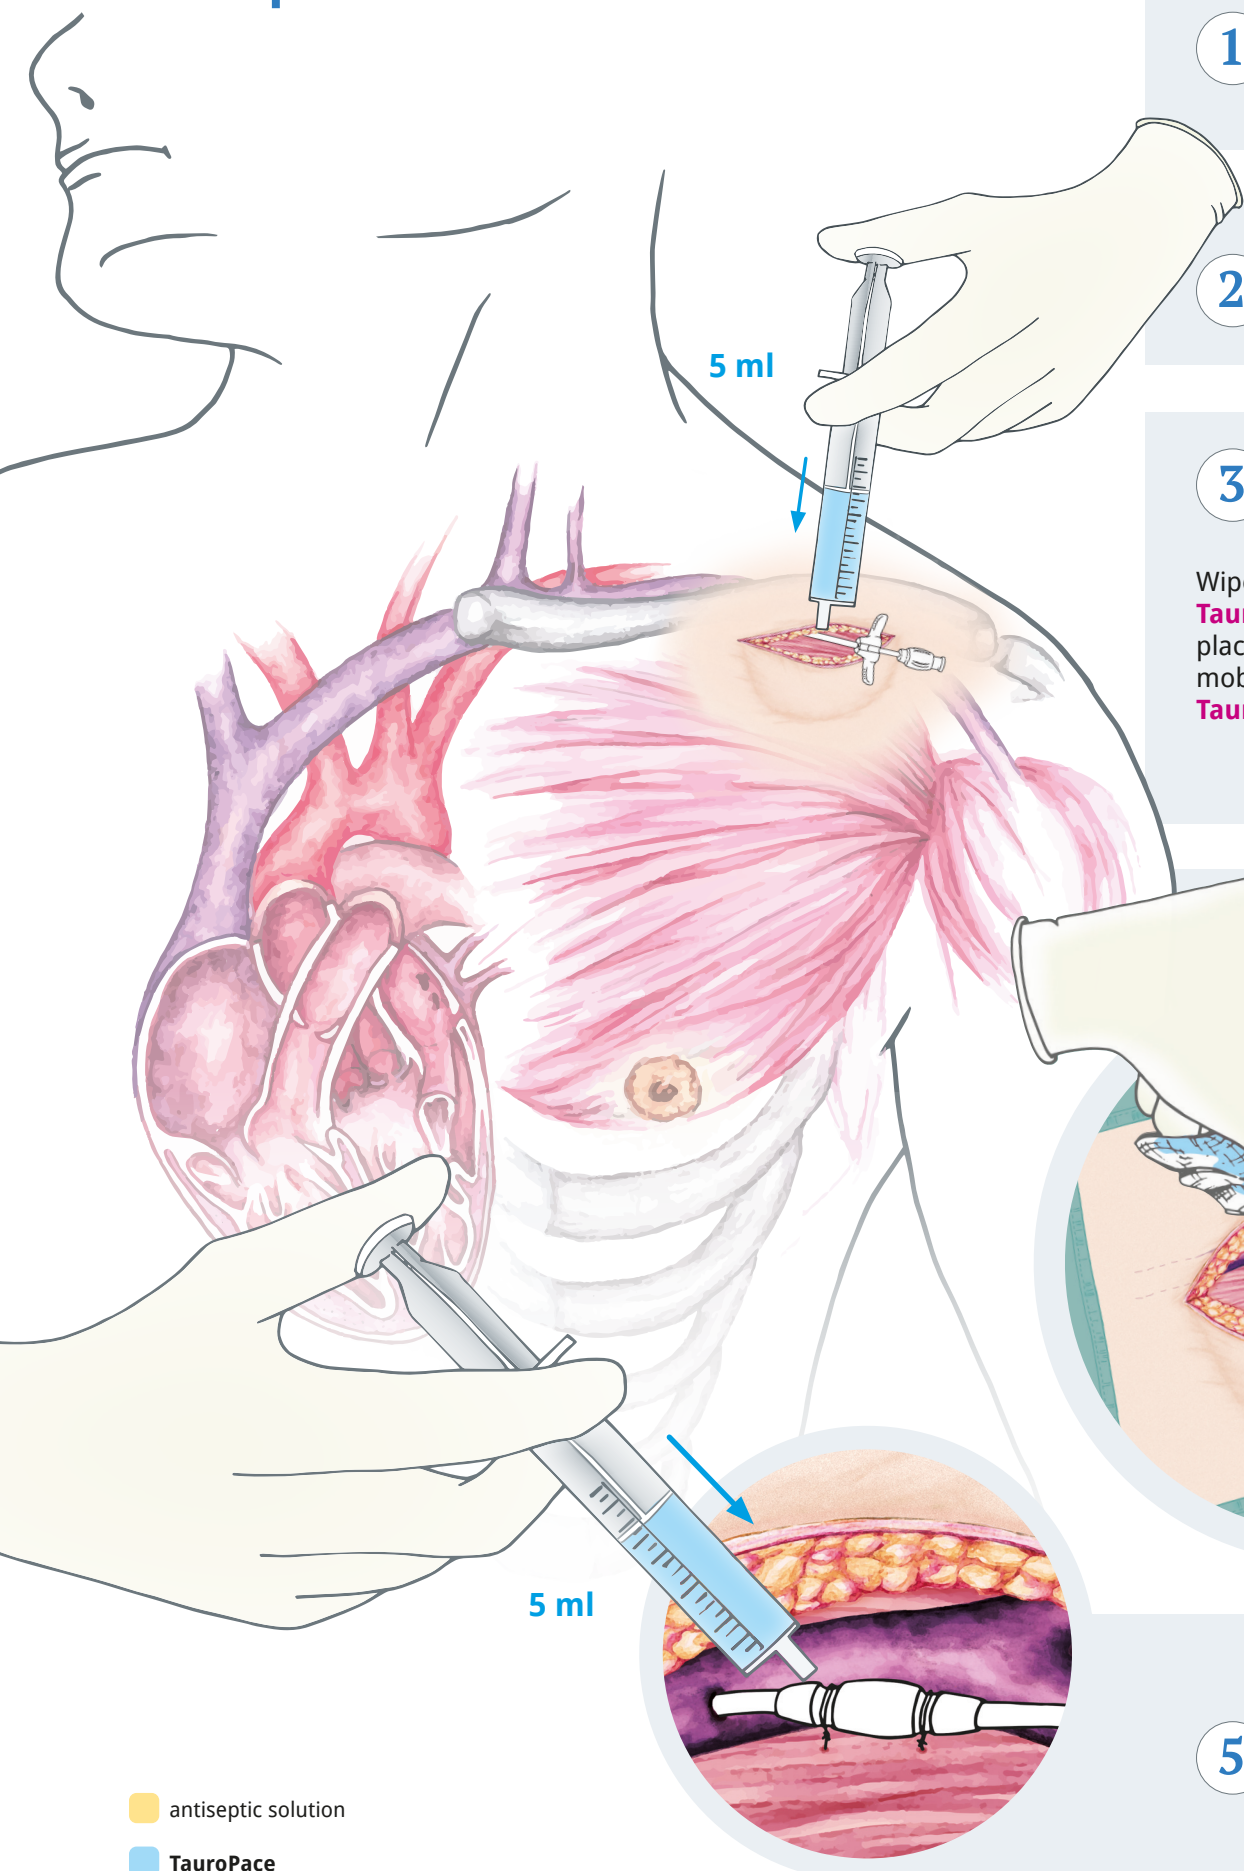

antiseptic solution

TauroPace

Generator substitution or revision

